

## Video Projector Information

**Use:** Multimedia projectors (a.k.a. video projectors) are used to project a large image from a VCR, computer or laser disk player.

**Accessories:** remote control, appropriate cables and either a computer, VCR or laser disk player.

## OPERATING INSTRUCTIONS

1. Plug projector into an electrical outlet.
2. Plug video unit into an electrical outlet.
3. Connect video unit to projector using appropriate AV cable.
  - *To hook up a VCR or laser disk player.*
    - a. 2 RCA audio plugs (one white, one red)  
Go from audio out on VCR or Laser disk player to audio in on projector.
    - b. 1 RCA video plug (yellow)  
Go from video out on VCR or Laser disk player to video in on projector.
  - *To hook up to a standard computer.*
    - a. Unplug monitor cable from CPU, attach VGA cable in that port on CPU.
    - b. Attach other end of VGA cable to the RGB1 or 2 Input port on projector.
    - c. Attach cable from monitor into Monitor Output RGB port.
  - *To hook up to a laptop computer.*
    - a. Attach one end of VGA cable to monitor port on laptop.

- b. Attach other end to RGB 1 or 2 input on projector.
  - c. After powering up it may be necessary to toggle laptop to get image on laptop and projection screen. See the computer's instruction manual.
4. Turn on MAIN switch on projector (NOTE: MAIN switch does NOT operate the lamp. The lamp is operated by the power switch.)
  5. Turn on video unit.
  6. Make sure projector is set to correct input source or mode (video one or video two - if computer is connected it will be either computer 1 or 2 or RGB 1 or 2 depending on the manufacturer)
  7. To operate lamp press power switch and allow to warm up

## **TROUBLESHOOTING**

### **No power**

Plug projector into an AC outlet  
Turn the MAIN On/Off button to ON  
press the LAMP POWER On/Off switch to ON  
Be sure the READY indicator light is ON  
Wait 1 minute after projector is turned OFF before turning the projector back on

### **Image is out of focus**

Adjust the focus  
Be sure the projection screen is at least 3.6 feet from the projector  
Check the projection lens to see if it needs cleaning

### **Lens is pulled in when power is switched off**

Check AUTO RETRACT function

### **Picture is L/R reversed**

Check Ceiling /Rear feature  
(click MENU button, move to Setting, click select button, move to Ceiling- make sure its OFF)

### **Picture is T/B inverted**

Check Ceiling feature (click MENU button, move to Setting, click select button, move to Rear - make sure its OFF)

**No sound**

Check audio cable connection from audio input source

Adjust audio source

Press the VOLUME (+) button

Press the MUTE button

**Remote control unit does not work**

Check the batteries

Make sure nothing is blocking between the remote control sensor and remote control unit

Make sure you are not too far from projector when using the remote control unit (max=16.4 ft)